

Ex no: 9
28/9/26


Implementation of Subnetting in CISCO PACKET TRACER Simulator.

Aim:-

To implement the subnetting in ~~packet~~ Cisco
Packet Tracer Simulator.

Procedure:-

- * Open Cisco Packet tracer and create a new network topology.
- * Add the required routers, switches, and PCs to the workspace.
- * Connect the device using appropriate copper cables.
- * Use the network 192.168.1.0/24 and divide it into 32 networks.
- * Configure the router interfaces with the required IP addresses and subnet mask 255.255.255.224.
- * Use enable and configure terminal in the router CLI.
- * Enter the interface configuration terminal in the router and assign the IP using:
 - * (i) ip address <IP address> 255.255.255.224
 - (ii) no shutdown.
- * Configure the required switch ports in access mode.
- * Assign each PC its IP address, subnet mask and default gateway.
- * Repeat the configuration for all required subnets.
- * Use the ping command to test connectivity between PCs and the router.
- * If ping is successful, the network is configured correctly.

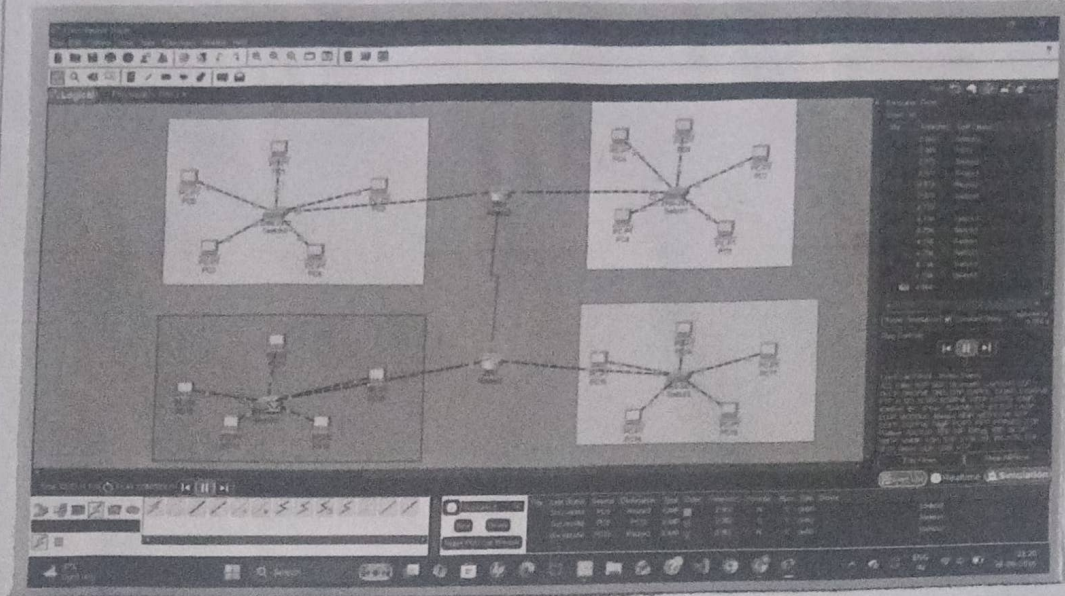

Result:-

The network was successfully subnetted using the /27 subnet mask in Cisco Packet Tracer.

Connectivity between the devices was successfully verified using the ping command.